


# Inkoppling av GSM-fjärrstyrning (Nyare modell)

(Säljes av BL Elektronik AB , 0923-66690)

Extern Antenn finns som tillbehör. Kontakta BL Elektronik AB.

KomfortEl har en ingång med vars hjälp elvärmen kan fjärrstyras. När ingången jordas (sluten kontakt), kopplas "normal temperatur" in, oavsett driftomkopplarens läge. KomfortEl ligger kvar i detta läge så länge kontakten är sluten. Den gröna Till-lampan blinkar 4 gånger per sekund, när kontakten är till och driftomkopplaren står i något annat läge än "normal temperatur". När kontakten öppnas, återgår KomfortEl till driftomkopplarens läge.

Kontakten skall vara potentialfri. Signalledningen mellan KomfortEl och kontaktfunktionen är en svagströmsledning.

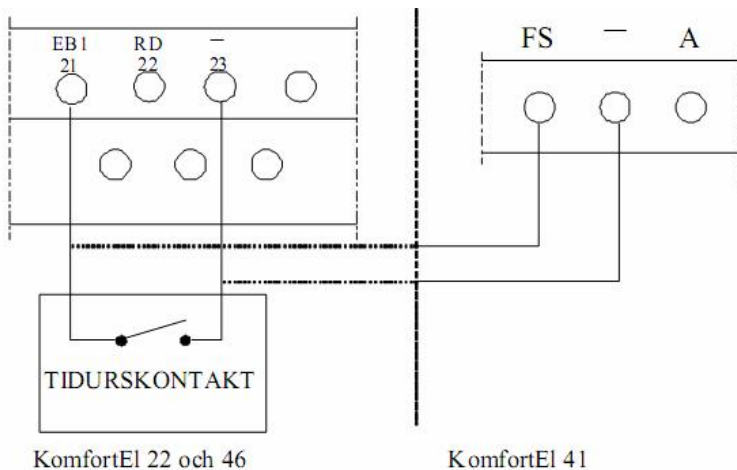

## Inställningar

För normal nattsänkning skall driftomkopplaren på KomfortEl ställas i "Nattläge" och Temperatursänkingsratten ställas på önskad nattsänkning.

Tiduret skall programmeras så att kontakten sluts under "Dagtid" dvs. under tiden man vill ha normal temperatur. När kontakten bryter, intar KomfortEl den sänkta temperaturen.

The image shows a close-up of the internal circuit board of KomfortEl. The board has a terminal block with terminals labeled +12-24VDC B, A, 0V, and 24V AC. A net adapter is connected to the board. The board also has a DIP switch and a microcontroller chip.

46VA	21 EB1	23 -
41VA	FS	-

Inkoppling av GSM-fjärrstyrning till 46VA och 41VA  
Programmering enl. manual  
Styrning enl. manual

Svart  
Vit fr. Nätadapter